



EcoTex Ozone Destruct Kit

Installation Instructions

1. Disconnect power to the EcoTex system.
2. Remove cover.
3. Cut green tubing that is attached to the flow meter outlet leaving $\frac{3}{4}$ -1" of tubing from the fitting on the flow meter.
4. Install the destruct unit on the tubing. Note: The destruct does not have a direction of flow.
5. Cut 1" from the other end of the tubing
6. Install tubing into the destruct unit. See picture at right.
7. Tighten fittings on both ends of the destruct unit.
8. Repeat for the green tube attached to the other flow meter.

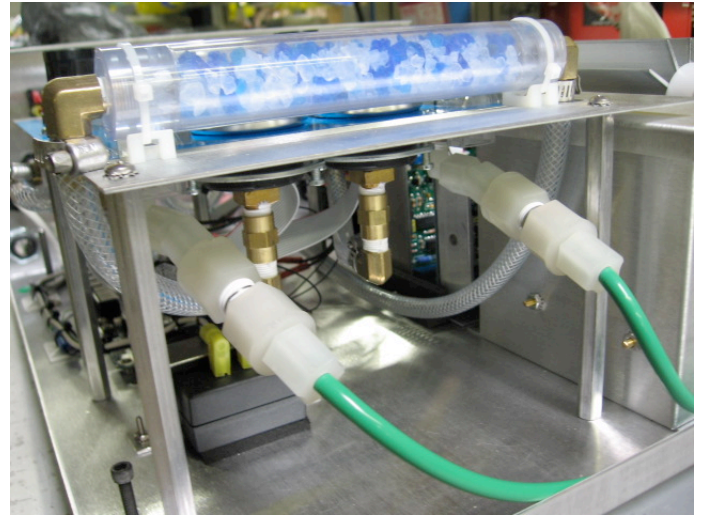

9. Route tubing as shown in picture below.

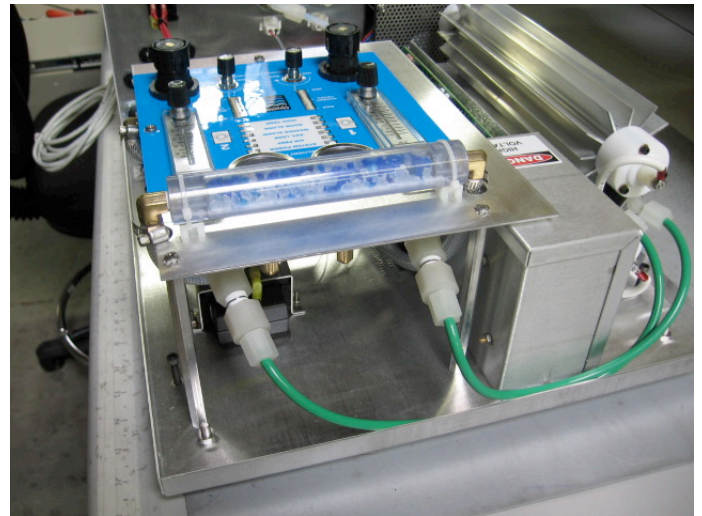

10. Connect power to the EcoTex system and check for leaks.
11. Install cover.



ClearWater Tech, LLC.
850-E Capitolio Way, San Luis Obispo, CA 93401
Ph: 805.549.9724 • Fax: 805.549.0306
E-mail: service@cwtozone.com • www.cwtozone.com

LIT1303•REV060109