Standard Output Inspection Sheet FOR USE WITH M1500, M15/AD & P2000

Shown: M15/AD

Ozone generator model: Ozone serial number:	
Oxygen concentrator: Oxygen serial number: (If installed)	
Date of installation:	
Inspector name: Contact #/email:	



Drive Board and Coil
Inline Particulate Filter (behind indicating desiccant chamber)
Reaction Chamber
Power Supply
Air dryers
Indicating Desiccant Chamber
Air Dryer Solenoid Valve
Cover Safety Switch
External Loop

When performing an inspection or troubleshooting a system please complete this form. For troubleshooting assistance, it can be emailed to service@cwtozone.com or faxed to 805-549-0306

1. Display Light & Coil Status

The drive board has a single red LED. During normal operation, note if the LED is illuminated; this indicates ozone output.

Ozone LED -*Red*: _____ (On / Off)

Also, note the status of the drive coil. Examine the underside of the coil to see if it has overheated and the bottom edge has expanded downwards.

Drive coil status: _____ (Normal / Expanded)






2. Gauge Readings

If a gauge assembly is installed, mark or list the readings observed during normal operation.

VAC/PSI: _____ (Expected: -3 to -8"Hg)
SCFH: _____ (Expected: 7 SCFH for M1500 and

M15/AD, 14 SCFH for P2000)

ClearWater Tech - VAC/PSI Gauge

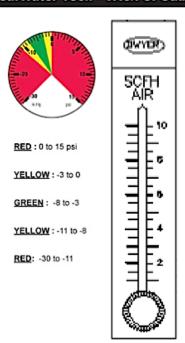

Standard Output Inspection Sheet FOR USE WITH M1500, M15/AD & P2000

3. Colored Crystals

Look for the inline particulate filter within the ozone generator.

In M15/AD units, look for the desiccant chamber visible through the cover.

The color of the media serves as a status check of the air dryer or oxygen concentrator.

The normal color for the inline particular filter is blue. For the chamber visible through the cover, it is mixed blue and white crystals.

Inline Particulate Filter



Any moisture passing through this media will be absorbed by the media and produce a color change from blue, to pink and finally to white. This serves as a status check of the air dryers or oxygen concentrators.

Color of media: _____ (Blue / Pink / White / Other)

4. Solenoid Valve Status

Valid only for the CD10/AD and CD12/AD

Confirm the integrity of the air dryer solenoid valve. If compromised, it will require replacement. Alternatively, the air dryer assembly as an entirety can be replaced.

Solenoid Status: _____ (Good / Bad)

Air Dryer Solenoid Valve Good Bad

5. Vacuum Break Status

If a vacuum break is installed, confirm there is water present within the riser tube and there are no bubbles in this water. If there are bubbles, confirm their direction of flow: up or down the riser tube.

6. Off Gas Vent Status

If a contact tank is installed downstream of the venturi injector, there will be an off gas vent present on top of the tank.

Under normal operation, water should be present within the clear bowl with air bubbling up regularly and flowing out of the outlet.

If the ozone generator is suspected of not generating ozone, check the vent's outlet for the smell of ozone (direct airflow over your hand, do not inhale directly).

Water level:	(None / At water level / Full)
Air venting:	(Yes / No)
Ozone scent:	(Yes / No)

Off Gas Vent

